



Assembly Instructions

a. b. c.

d. e. f.

In the box:


- a. Leg sections (x2)
- b. "L" shaped brackets (x36)
- c. Cable tray (inner & outer)
- d. Desk top
- e. Acrylic top
- f. Cable port



1. Invert the desk top so that the cutouts face upwards.



2. Begin to insert the "L" shaped brackets, alternating the long and short sides, 6 brackets for each of section (3 sections per side).

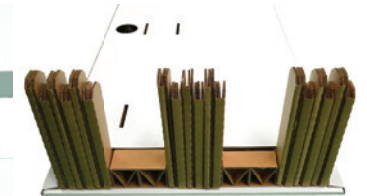

3. Pre-bend the two cable tray components along the scored lines.



4. Fit the brown tray first, pushing the tabs into the slots on the underside of the desk top, followed by the white tray cover.



5. Prepare each leg by folding the tabs down inside.



6. Gently slide the legs over the brackets, checking that each bracket has been guided into the correct channel. Guide the remaining tabs on the cable tray sections away from the "L" shaped brackets, into their own channel, then push the leg fully into place.



7. Turn the desk over and position the acrylic top on the desk, anchoring with the cable port provided.

